

UP TIMER
(Flashes on hold)



EDET-42470-MST/TRIPOD/12VBT DOWN TIMER (Flashes on hold)

SPECIFICATIONS

- TYPE: ----- DIGITAL
- DISPLAY: ----- 4-DIGIT, 7 SEGMENT SUPPER BRIGHT LED
- CHARACTER HEIGHT: ----- 7" (177.8mm) MIN/SEC UP/DOWN & REAL TIME
- VISIBILITY: ----- 500 Ft. (152.4m)
- POWER REQUIREMENTS: -- 100-240V 50~60Hz (12vdc Battery)
- FRAME: ----- ALUMINUM (Black Anodized Finish)
- DIMENSIONS: ----- 12.25" x 28.25" x 1.35"
- WEIGHT: ----- 9 lbs.
- OPERATING TEMP.: ----- -17° TO 150° F
- HUMIDITY: ----- 0% TO 95%
- OPERATING MODE: ----- UP/DOWN MIN/SEC & TIME

12 v BATTERY
SEALED LEAD-ACID



CHARGER



TRANSFORMER TO RUN
ON 100-240 50~60 Hz



DET IRR INSTRUCTIONS

TO USE THE **COUNT UP TIMER** PRESS THE **(NEXT) KEY**. THE COUNT UP TIMER IS DISPLAYED. TO SET A START TIME PRESS THE **(ENTER) KEY**. THE DIGITS FLASH, ENTER THE **MIN/SEC** THEN PRESS THE **(ENTER) KEY** TO SET THE TIMER. TO RESET THE TIMER TO ZERO PRESS THE **(LOAD) KEY TWICE**. TO START THE TIMER PRESS **(RUN/HOLD) KEY**.

(NOTE) THE COUNTER CAN ONLY BE RESET IN THE HOLD MODE.

TO SET THE **BRIGHTNESS** PRESS THE **(NEXT) KEY**. THE **BRIGHTNESS** IS DISPLAYED. TO SET PRESS THE **(ENTER) KEY**. THE DIGITS FLASH, ENTER THE **TWO DIGIT BRIGHTNESS** YOU WANT THEN PRESS THE **(ENTER) KEY** TO ACCEPT.

TO USE THE **COUNT DOWN TIMER** PRESS THE **(NEXT) KEY**. THE COUNT DOWN TIMER IS DISPLAYED. TO ENTER A COUNT DOWN TIME PRESS THE **(ENTER) KEY**, THE DIGITS FLASH, THEN ENTER THE **HRS/MIN/SEC** THEN PRESS THE **(ENTER) KEY** TO SET THE COUNT DOWN TIME. TO PLACE ON HOLD PRESS THE **(RUN/HOLD) KEY**, TO RUN PRESS THE **(RUN/HOLD) KEY** AGAIN. THE **(LOAD) KEY** IS USED TO RESTORE THE LAST ENTERED COUNT DOWN TIME **PRESS TWICE**.

(NOTE) THE COUNTER CAN ONLY BE RESET IN THE HOLD MODE.

IF YOU MAKE AN ERROR AND YOU HAVE NOT HIT THE **(ENTER) KEY** TO START, HITTING THE **(STOP) KEY** WILL RESTORE THE DISPLAY TO ITS ORIGINAL VALUE.



**MOMENTARILY PRESS,
THE TIMER KEY FIRST!**



IF THE BATTERIES ARE REPLACED REPROGRAM THE REMOTE CONTROL

STEP 1: PRESS AND HOLD THE **(SETUP)** BUTTON UNTIL THE LED STAYS ON, THEN RELEASE.


STEP 2: PRESS AND RELEASE THE **(DVD/VCR)** BUTTON.

STEP 3: ON THE KEY PAD PRESS **0353**. AFTER YOU PRESS THE LAST DIGIT, THE LED TURNS OFF.

OPTION 12VBT




CHARGER

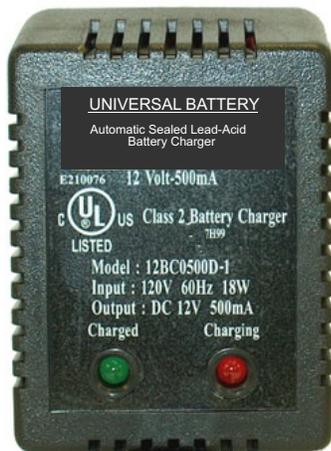

12 v BATTERY SEALED LEAD-ACID

Gases generated during charging are recombined in a unique "oxygen cycle".

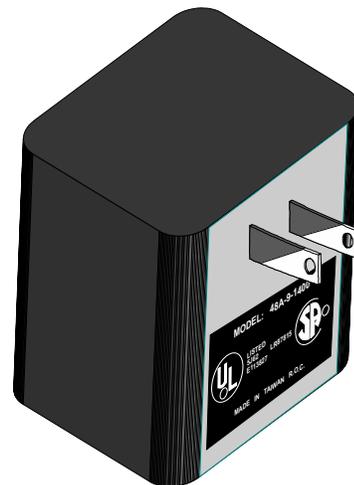

TRANSFORMER TO RUN ON 100-240 50~60 Hz